


Battery Guide

for AssetScan Models ASB, ASM, ASV

Battery Replacement

- 1** Open transmitter case by pulling up on two latches on front of case. Battery is located on left side of case.
- 2** Peel back end of Velcro strap and pull it through metal buckle so it is no longer around battery.
- 3** Disconnect red and black wires from battery. Battery can be pulled out if it's difficult to reach connectors. Remove old battery from case.
- 4** Pull up on metal buckle from bottom of case to show more buckle strap.
- 5** Connect red and black wires to their respective terminals on a new battery.
- 6** Lay new battery in case so bottom of battery is against left side of case. Make sure terminals are towards back of case.
- 7** Slide Velcro strap through metal buckle.
- 8** Pull on edge and end of Velcro strap in order to feed across battery to position buckle at bottom of case.
- 9** Pull tight and fasten Velcro to itself around battery. Close and latch lid.

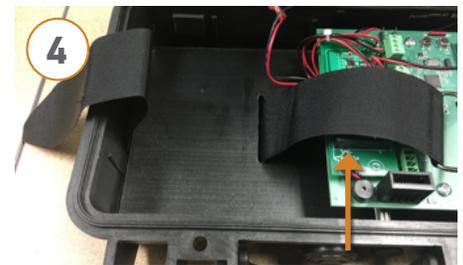

Battery Guide

for AssetScan Models ASB, ASM, ASV



The power of analytics. **Delivered.**

Battery Recovery


- 1 If battery voltage is at least 8 volts, a full charge can take 6-8 hours. Charging is indicated by charger LED immediately turning **RED** during charging, then **GREEN** when done.
- 2 If battery is less than 8 volts, battery charger LED will stay **GREEN**, indicating float (trickle) mode. In this case, to expedite battery charging, it is required to disconnect power connector (shown in figure 2) on transmitter's electronics board until charger LED turns **RED** (normal charge mode). Once in normal charge mode, charger will provide enough current to power transmitter's electronics and power connector can then be re-connected.

Notes:

Best practice is to charge battery before it gets below 11 VDC.

This charger is designed to avoid charging a really low battery at a high rate as it will cause battery damage (outgassing and plate damage), reducing battery life significantly.

Float mode charging will not provide enough energy to complete a transmitter's reporting process, thus charger will continue in float mode and charger LED will never turn **RED** to indicate charge mode.

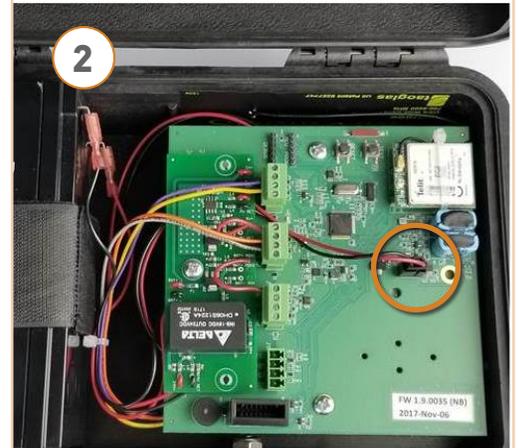

Please recycle old battery at a local recycling center.

223-0184-000 Rev. A 6/19

ATEK Access Technologies
10025 Valley View Road, Ste. 190
Eden Prairie, MN 55344 U.S.A.

PH: 1.800.523.6996
FAX: 1.800.589.3705
+1.218.829.9797

www.atekaccess.com



Access the power of technology.