


# Multipurpose Monitor - ASM Hardware Setup Instructions

**IMPORTANT: Call ATEK's Customer Care Team (CCT) at 800-523-6996 prior to moving forward with any of these setup instructions. Site and contact information is needed before data can be accepted by ATEK Intelligence Platform (AIP).**



## Setting up the Monitor

- 1** Open monitor case by pulling up on two latches on front of case.
- 2** Connect black wire to negative (top) battery terminal as shown. Ensure red wire is seated on positive terminal.  
Green LEDs on board will begin to light up.
- 3** Remove protective caps from Sensor Ports and connect sensor cable ends to receptacles. Be sure connectors are snug to provide environmental seal.
- 4** Connect cables to sensors as needed. Refer to product manual for detailed instructions.
- 5** Wait 2 minutes after plugging in battery then press **TEST** button on board.  
Monitor will go through a data collection cycle that will last for 10 minutes before reverting to normal operation.
- 6** Call ATEK Customer Care Team at 800-523-6996 to ensure monitor has communicated with AIP or login if access is already available.
- 7** Shut and latch lid.

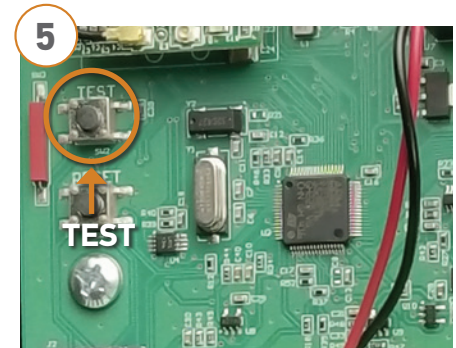

# Multipurpose Monitor - ASM Hardware Setup Instructions



The power of analytics. **Delivered.**

## Recharging the Monitor Battery\*

- 1 Charging port is located on right side of monitor case.
  - 2 Remove threaded plastic cap from charging port by turning counterclockwise.
  - 3 Plug battery charger's AC plug into a nearby outlet and screw charging jack into charging port using silver nut.
  - 4 LED on battery charger will turn red to indicate monitor is charging.
  - 5 Monitor will begin charging. Full charge is achieved within 6-8 hours.
- 5 LED on battery charger will turn green when charging is complete.

Unscrew charging jack from charging port and secure attached plastic cap onto charging port.

\*Note: Battery should be charged between -10° C and 40° C (14° F and 104° F). See Product User Manual for detailed information on battery use and care.



223-0166-002 Rev. A 4/18

ATEK Access Technologies  
10025 Valley View Road, Ste. 190  
Eden Prairie, MN 55344 U.S.A.

PH: 1.800.523.6996  
FAX: 1.800.589.3705  
+1.218.829.9797

[www.atekaccess.com](http://www.atekaccess.com)



Access the power of technology.