

Hardware Setup Instructions

Vibration Transmitter - Model ASV



The power of analytics. **Delivered.**

IMPORTANT: ATEK's Customer Care Team (CCT) is ready to assist with any setup help necessary to fully utilize the AssetScan Transmitter. Site and contact information is needed before data is properly managed by the ATEK Intelligence Platform (AIP). 800-523-6996



Setting up the Transmitter

- 1 Open transmitter case by pulling up on two latches on front of case.
- 2 Connect black wire to negative (top) battery terminal as shown. Ensure red wire is seated on positive terminal.
Green LEDs on board will begin to light up.
- 3 Remove protective caps from Sensor Ports and connect sensor cable ends to receptacles. For transmitters with 2 vibration type sensors, connect cable with orange wire tie to Sensor Port 1. For transmitters with vibration/temperature sensors, always connect vibration type sensor to Port 1. Doing so will ensure proper scaling on the AIP. Be sure connectors are snug to provide environmental seal.
- 4 Connect cables to sensors as needed.
- 5 Wait 2 minutes after plugging in battery then press **TEST** button on board.
Transmitter will go through a data collection cycle that will last for 10 minutes before reverting to normal operation.
- 6 Call ATEK Customer Care Team at 800-523-6996 to ensure transmitter has communicated with AIP or login if access is already available.
- 7 Shut and latch lid.



Hardware Setup Instructions

Vibration Transmitter - Model ASV



The power of analytics. **Delivered.**

Setting up the Transmitter (continued)

- Slide washer off magnetic end of vibration sensor and place vibration sensor onto a magnetic surface on motor or machinery bearing hub or other location of interest.

Place vibration sensor so magnetic rails are parallel with curvature of housing if surface is not flat. It is best to place vibration sensor on a smooth surface.


Gently place one rail down first then “rock” vibration sensor to place other rail. Do not place both rails at same time, as this may cause damage to vibration sensor.
- Locate transmitter unit for best cellular signal. Route sensor cable with caution to protect from damage.

Recharging the Transmitter Battery*

- Charging port is located on right side of transmitter case.
- Remove threaded plastic cap from charging port by turning counterclockwise.
- Plug battery charger's AC plug into a nearby outlet and screw charging jack into charging port using silver nut.
- LED on battery charger will turn red to indicate transmitter is charging.

Transmitter will begin charging. Full charge is achieved within 6-8 hours.
- LED on battery charger will turn green when charging is complete.
- Unscrew charging jack from charging port and secure attached plastic cap onto charging port.

*Note: Battery should be charged between -10° C and 40° C (14° F and 104° F). See Product User Manual for detailed information on battery use and care.

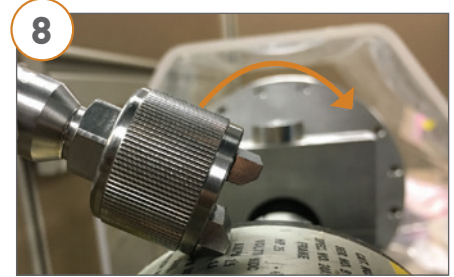

223-0166-001 Rev. B 6/18

ATEK Access Technologies
10025 Valley View Road, Ste. 190
Eden Prairie, MN 55344 U.S.A.

PH: 1.800.523.6996
FAX: 1.800.589.3705
+1.218.829.9797

www.atekaccess.com

ATEK Access Technologies

Access the power of technology.

©2018 ATEK Access Technologies, LLC. All Rights Reserved. AssetScan images and marketing materials are protected by various patents, copyrights and/or trademarks. ATEK assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of ATEK are granted by the Company in connection with the sale of AssetScan products, expressly or by implication.